

1. Switching the alarm on

To arm the alarm system and lock the car central lock automatically - quickly press button nr 1 of the remote control. It is signalled with a single flash. If after 5sec. (or 38sec. if there is a long factory delay of fading interior light set) from pressing the button nr 1, there are still open doors or hatches, the system signals it with five sound impulses and switches the door sensors off. Door sensors will be automatically switched on when the doors or hatches are closed, which is signalled with a single sound (impulse) of the siren.

Switching additional sensors off

Press button nr 1 again in 5-25sec. from turning the alarm on to activate additional sensors, for example motion detectors (so you may leave a child or a dog in the car with the system still operating). Switching additional sensors off is confirmed by five sound impulses.

2. Switching the alarm off

Quickly press button nr 2 of the remote control to switch the alarm system off. It is signalled with a double flash (in case when the alarm had gone off- with three flashes and sound impulses).

REARMING – (automatic arming of the system)

When you switch the alarm system off (for example accidentally) and within 30sec. no door is opened or ignition activated, the alarm switches on automatically and locks the central lock.

3. Silent or loud mode of switching the alarm on/off

This function might be programmed by the fitter on his own risk, however it is not allowed to use loud mode of switching the alarm on/off in the European Union. In order to set loud or silent mode of switching the alarm on/off - press both: buttons 1 and 2, but only if such function has been activated by the fitter.

4. PANIC Function (scaring off)

This function works only when the alarm is on. Press and hold button 1 (3sec.) to turn the PANIC function on (holding the button is signalled with flashes and sounds). This function is useful while searching the car in the parking lot or in order to scare off a person leaning on the car.

5. Operating the car central lock with the remote control

Press and hold button 2 (3sec.) to open/close the car central lock without activating the alarm.

DOORS and HATCHES TEST

While opening a door or a hatch of the car, the diode lights up. This means, that given sensor is currently operating.

6. The history of alarms / alarms limit

Activate the ignition and press button 2 of the remote control to display alarms history in the sequence from the latest to the earliest events. It helps to find causes of false alarms (for example: wrong regulation of sensors) and most of all indicates the way of an attempted break-in. Four consecutive events are displayed in 5sec. intervals. SINGLE flash of the LED indicates activation of the door alarm. DOUBLE flash – the ignition alarm, THREE flashes – the alarm from additional sensors, NO flash – the alarm has not been activated. Press both buttons 1 and 2 together with activating the ignition to erase the memory (while displaying the memory it cannot be erased).

NOTICE: After 8 consecutive alarms the system cuts off additional sensors, after 10 alarms the system cuts of door sensors.

7. Signalising low battery in the remote control

Five flashes of indicators while activating the alarm indicate low battery in the remote control.

8. Operating car central lock from the ignition

The alarm has the function to operate car central lock after activating the ignition (so called 'safety lock'). 1. Activate the ignition with all doors closed to lock the car central lock. This function is useful while driving – it prevents from intrusion of undesirable persons while stopping for example at pedestrian crossing and also protects a child left on back seats. 2.

Activating the ignition with a door opened does not causes locking the central lock.

Activation or deactivation of this function: 1. Activate the ignition, 2. Press and hold (5sec.) button 1 in the remote control – the siren signals a change of the function: 3 sounds – the function is off, 6 sounds – the function is on.

9. Remote opening a boot/trunk*

(this function might be used for remote turning on/off interior lights, operating windows or sunroof)

The system allows operating an additional channel which enables remote opening a boot. In order to open a boot press button 2 thrice while the alarm is disarmed.

10. Emergency switch off the alarm

It is used for example in case of loosing remotes, by entering PIN CODE. Activate and deactivate ignition thrice while the alarm is armed (the siren is working) to light the LED for 3sec. – during that time activate ignition, so LED starts the count from 1 to 9. Deactivate ignition after required amount of flashes (the LED has to fade, otherwise the system abandons the procedure) to accept the required digit. Consecutive activation of ignition starts generating new LED flashes for entering next digit of the code. Enter 4 digits of your individual code programmed by the fitter (PIN CODE). It enables using the car without remote controls. Using the remote control after this procedure restores natural functioning of the system.

THE INSTALATOR MAY ACTIVATE 'INDEPENDENT IMMOBILIZER' OR 'IMMOBILIZER WITH KIDNAPPER' FUNCTIONS – OTHERWISE FUNCTIONS PRESENTED BELOW DOES NOT WORK

11. Disarming the immobilizer

Activation of the ignition does not allow to drive the car – first press the hidden button of authorisation. Immobilizer function activates by opening doors.

12. Kidnapper deactivation

Programming – see point 13. Activate the ignition, disarm the immobilizer (see point 11). Kidnapper function activates by opening doors while the

ignition is activated. In order to deactivate the function press the authorisation button.

Activation of the kidnapper function is signalled with 3 flashes of the LED. If the system is armed, the procedure is the following: after 15sec. indicators start flashing, after another 15sec. the siren turns on for 1min.15sec. If we stop the car and turn the ignition off, the kidnapper should be deactivated in order to drive the car (the blockade 'unclasps' the starter).

13. Programming the immobilizer or the kidnapper with the kidnapper

Press and hold both buttons of the remote control while the ignition is activated to turn the independent immobilizer function on (the sirens signalise it with three sounds). Run this procedure with doors open to activate the immobilizer with the kidnapper function (the siren signalises it with six sounds).

14. Service condition – turning off independent immobilizer/kidnapper functions

Press the authorisation button ten times within 10sec. to turn on/off the function.

* - indicates an option